

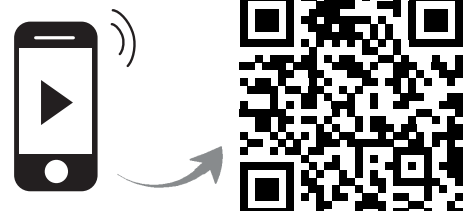
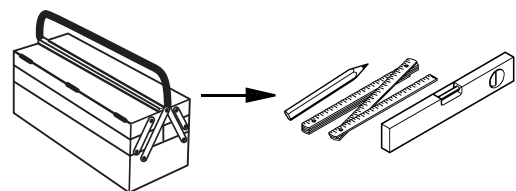
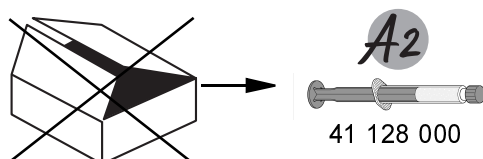


QUICKFIX

GROHE

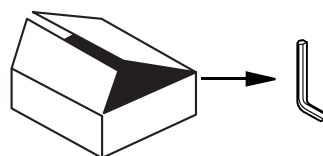

QuickGuide

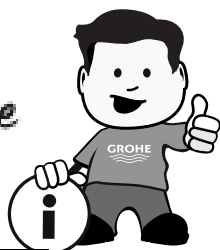

DIN 1988
DIN EN 806


DESIGN + ENGINEERING GROHE GERMANY
www.grohe.com

99.1862.031/ÄM 252372/06.22


1




5

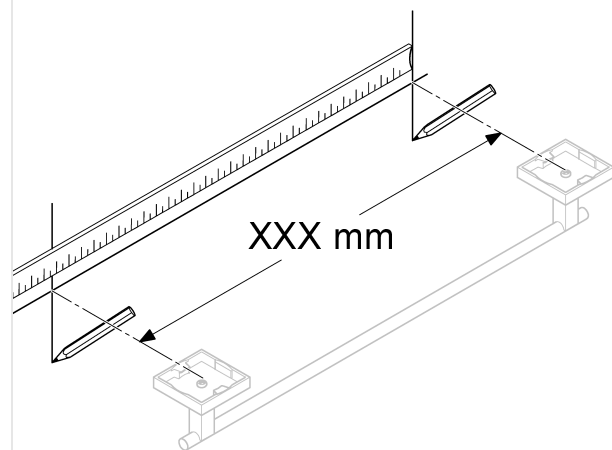


9

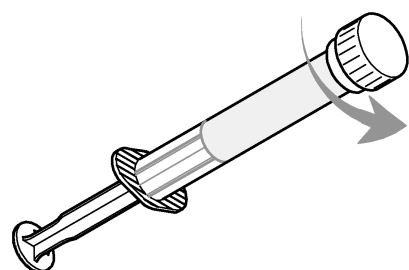


2

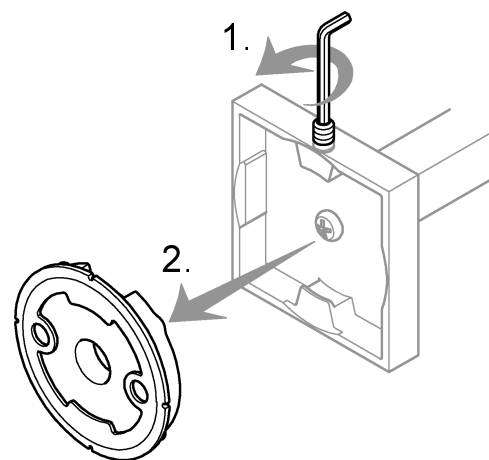


6

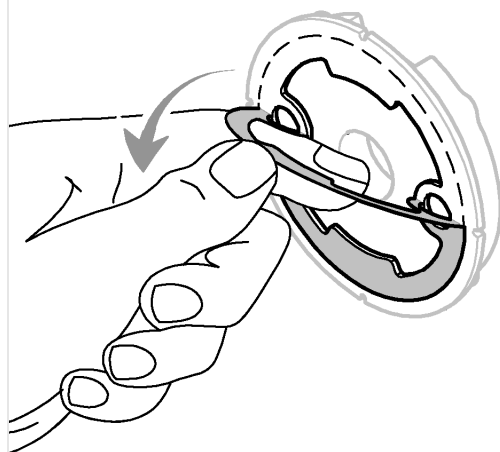


10

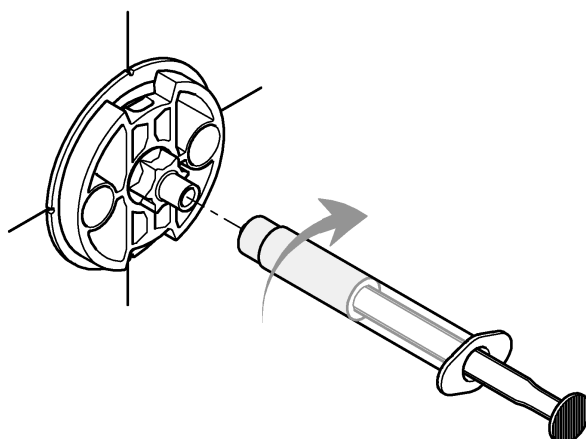


3

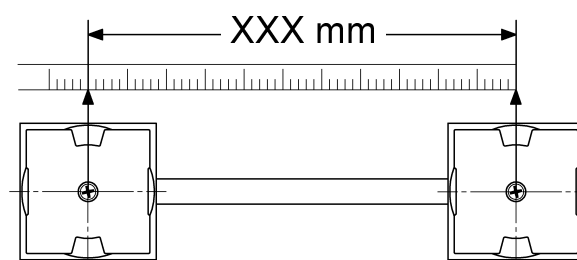


7

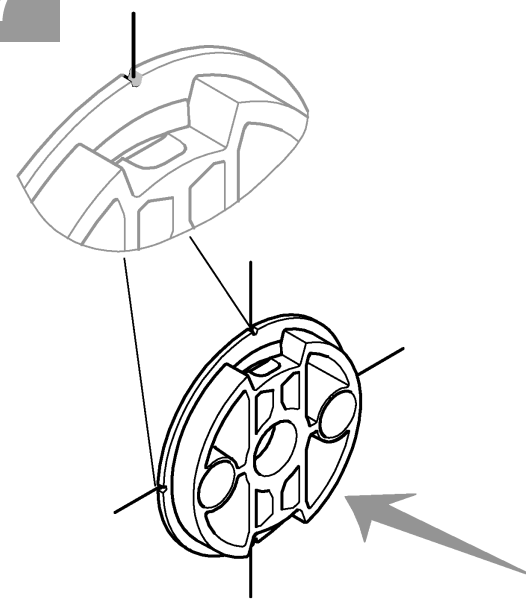


11

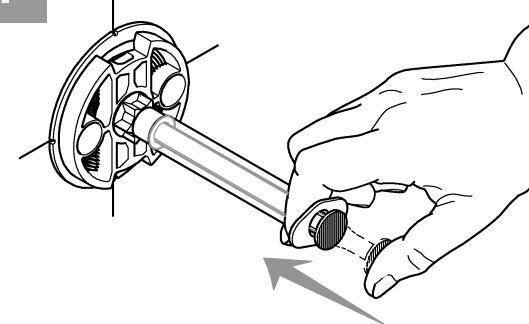


4

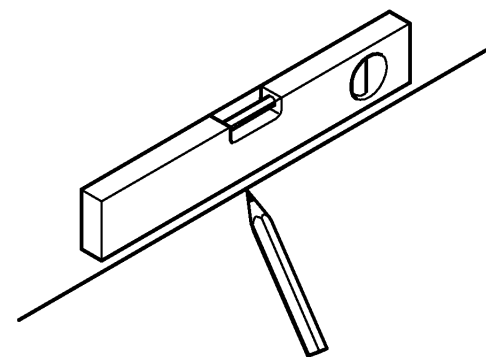


8

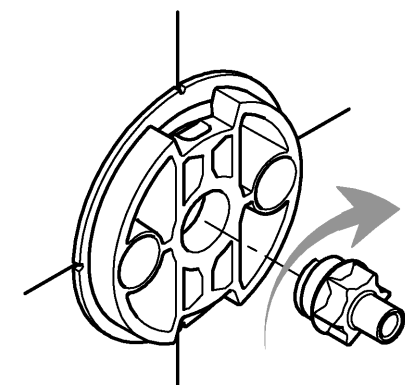


12

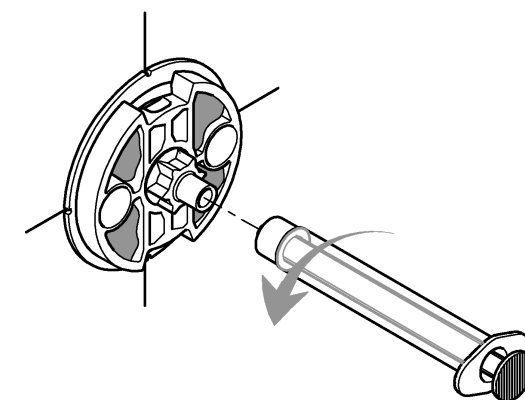


STOP!

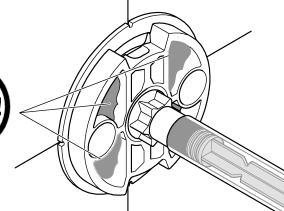


13

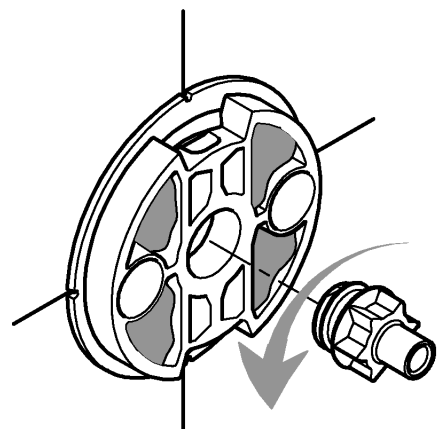



14

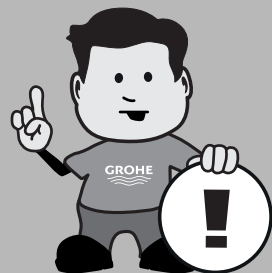

24h

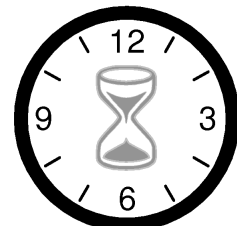


15

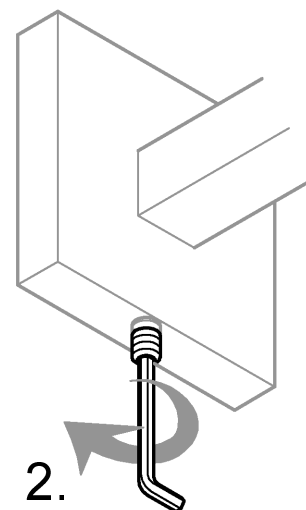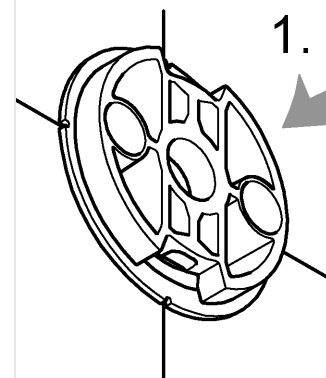


Easy off



1

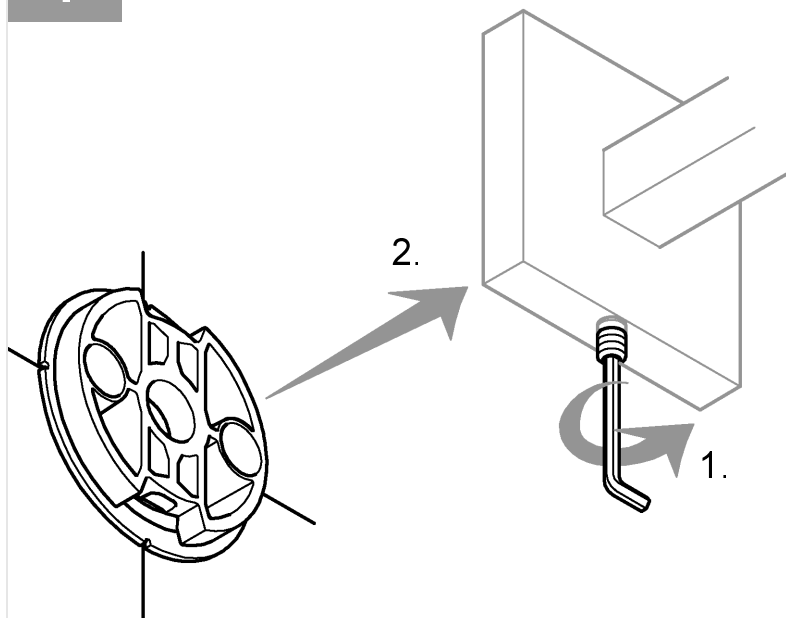

2

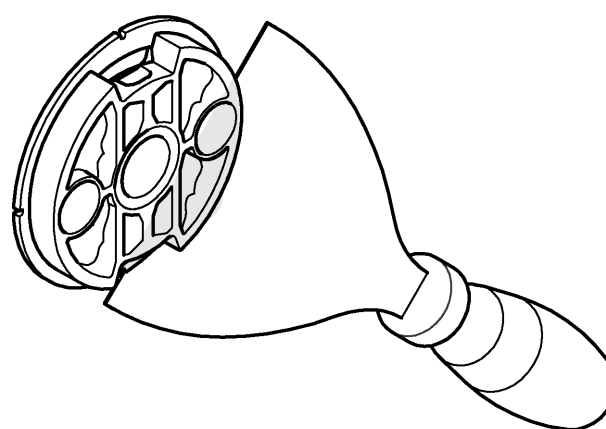

3

